



great things happen in a chair



USER GUIDE: **13AIR** air lumbar support (optional)

1 lumbar position adjustment - From the seated position, grasp air ball located at base of back. Tighten valve and pump with hand to increase lumbar support. Release valve to reduce lumbar support

tighten & pump = increase lumbar support

release = reduce lumbar support



Contract Holder

contract #: GS-28F-005CA

contractor: VIA INC