


gas lift cylinder

removal guide


required tools:



safety glasses

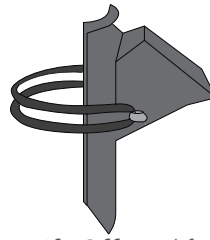

Lift-Off gas lift
removal tool

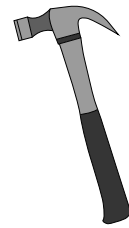


metal hammer

before removal:


- Extend chair to the highest seating position.
- Carefully turn chair over to an upside down position onto carpet or soft surface.




remove base from cylinder:

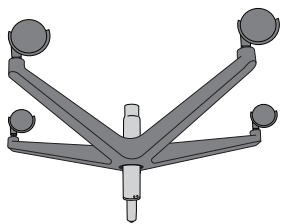

Step 1: Hold chair upside down by the 5-star base.

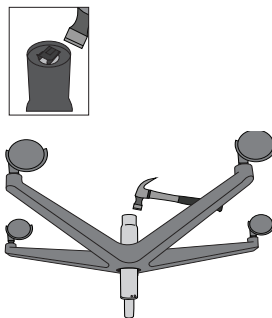

Step 2: With metal hammer, give a light-but firm-tap on the bottom **edge** of the cylinder until the chair falls out of the base.

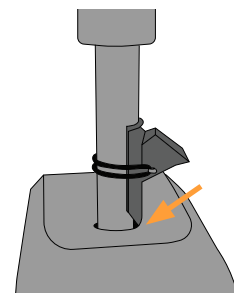


Step 3: Install the **Lift-Off** tool on the top part of the lift and as close as possible to the control.


gas lift cylinder

removal guide

remove gas lift cylinder:

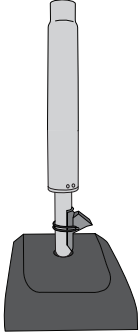

Step 4: Hold chair upside down by the gas cylinder.

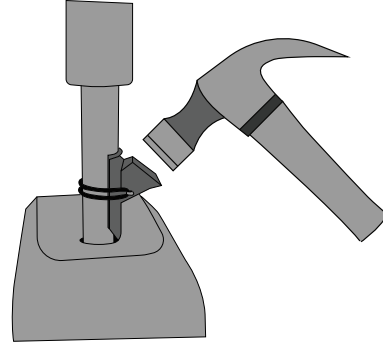

Step 5: With metal hammer, give the **Lift-Off** tool several solid hits on the flat part of the tool until cylinder releases from control.